

## Fernbedienung / Remote Control

### IR-EASY (ab V3.5)



Zusatzkontakt / 3.5 mm connector

Taste / Key    Signal    Easywave

1 :	1	1A
2 :	2	1B
3 :	3	2A
4 :	4	2B
5 :	5	3A
6 :	6	3B
7 :	7	4A
8 :	8	4B
9 :	9	5A
0 :	10	5B
Vol + :	11	6A
Vol - :	12	6B
CH + :	13	7A
CH - :	14	7B
TEXT :	15	8A
TV :	16	8B

	:	IRS 1 ON
	:	IRS 1 OFF
	:	IRS 2 ON
	:	IRS 2 OFF
EXIT :	:	IRS 3 ON
TOP MENU :	:	IRS 3 OFF
MENU :	:	IRS 4 ON
PICT :	:	IRS 4 OFF
	:	IRS Ext 1 (3,5mm Adr 1)
	:	IRS Ext 2 (3,5mm Adr 2)
	:	IRS Ext 3 (3,5mm Adr 3)
	:	IRS Ext 4 (3,5mm Adr 4)

Adresse wählen /  
Select Address

Adr 1: TV  
Adr 2: DTT  
Adr 3: SAT  
Adr 4: AUX

**IRS Signale nur in Level TV! / IRS Signals in Level TV only!**

## Fernbedienung / Remote Control

### IR-EASY (ab V3.5)



Zusatzkontakt / 3.5 mm connector

Taste / Key    Signal    Easywave

1 :	1	1A
2 :	2	1B
3 :	3	2A
4 :	4	2B
5 :	5	3A
6 :	6	3B
7 :	7	4A
8 :	8	4B
9 :	9	5A
0 :	10	5B
Vol + :	11	6A
Vol - :	12	6B
CH + :	13	7A
CH - :	14	7B
TEXT :	15	8A
TV :	16	8B
▲ :	IRS 1 ON	
▼ :	IRS 1 OFF	
◀ :	IRS 2 ON	
▶ :	IRS 2 OFF	
EXIT :	IRS 3 ON	
TOP MENU :	IRS 3 OFF	
MENU :	IRS 4 ON	
PICT :	IRS 4 OFF	
● (red) :	IRS Ext 1 (3,5mm Adr 1)	
● (green) :	IRS Ext 2 (3,5mm Adr 2)	
● (yellow) :	IRS Ext 3 (3,5mm Adr 3)	
● (blue) :	IRS Ext 4 (3,5mm Adr 4)	

Adresse wählen /  
Select Address

Adr 1: TV  
Adr 2: DTT  
Adr 3: SAT  
Adr 4: AUX

**IRS Signale nur in Level TV! / IRS Signals in Level TV only!**